


### S1695 Handheld Transmitter

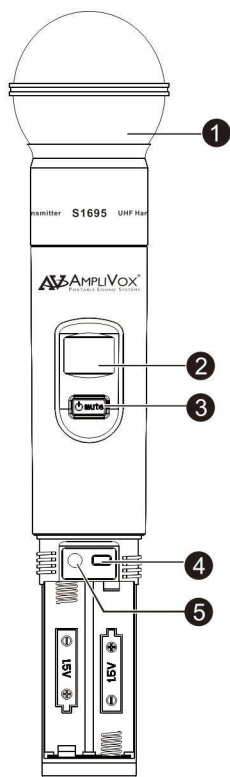

#### Functions:

- ❶ Interchangeable microphone head.
- ❷ LCD screen
- ❸ Power/Mute Control switch  
Middle position is Mute.
- ❹ Select button
- ❺ Microphone input sensitivity adjustment

#### Handheld Transmitter

##### Transmitter Status Display



Push the MUTE/⏻ button 2 second, the display will skip to the group and channel selection. Continuously push two times on the MUTE/⏻ button to turn on MUTE/⏻ function, to turn off the MUTE/⏻ function with the same operation.


**Manually selecting the group and channel:** **[select]**  
Push and hold the button until the group and channel display flashes alternately, push the **[select]** button to change the channel.

**Transmitter data lock and unlock:** **[select] + ⏻**  
Push the mute and select button at the same time to lock and unlock the transmitter data. When locked, channel cannot be changed.

**Battery displayer:**  
Display the transmitter battery level.

#### Battery Replacement

- The life expectancy of two alkaline batteries is about 10 hours.
- When the power indication symbol on the display screen keeps flashing as shown in the left diagram, the batteries should be replaced immediately, as shown in the above.

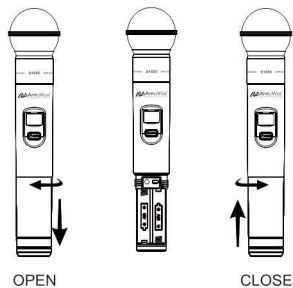

#### Specifications

##### S1695 Handheld Transmitter

Audio Input Level maximum

0 dBV

Dimensions (including the microphone)

9<sup>5</sup>/<sub>8</sub>" H x 2" DIA

Weight

8.4 oz

Battery Requirements

2 "AA" alkaline batteries or rechargeable batteries

Battery Life

> 10 hours (Alkaline)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA- AMPLIVOX