

Xantech®

MODEL

284D


Dual Designer Emitter

INSTALLATION INSTRUCTIONS



DESCRIPTION


The 284D Designer Emitter each contain a tiny infrared LED housed in a miniature, designer styled, black appearing, injection molded plastic shell. They emit IR (infrared) control signals sent to them by IR receivers or other Xantech controllers. The 284Ds can be installed directly on the IR sensor window of the controlled devices or other suitable location.

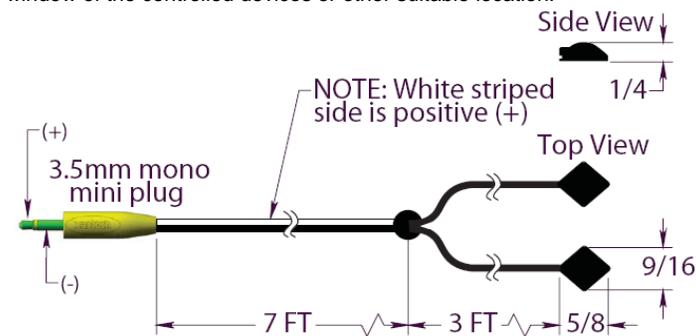

INSTALLATION

ATTACHING THE EMITTERS TO IR SENSOR WINDOWS


- Each emitter has a clear adhesive layer on the bottom flat surface of the shell.
- Simply peel off the adhesive cover and affix the emitter to the center of the IR sensor window on the controlled component's front panel.

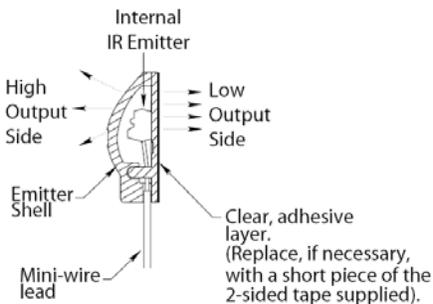

- In some cases it may be difficult to find the location of the IR sensor on the component. Consult the owner's manual of the unit, or the manufacturer, for the exact IR sensor window location.
- Double-sided adhesive tape is included. If you move the emitter to a different component, use this tape to replace the current adhesive layer for the best adhesion.
- The shell, though dark in appearance, is transparent to infrared light, allowing commands from a handheld remote control to pass through it. This permits direct control of the equipment from a handheld remote as well as from the 284D.

BLACK (IR OPAQUE) EMITTER SHIELD


- An optional shield, available from Xantech as model 28DES, fits over the emitter head and the sensor window of the controlled component. It prevents unwanted external IR signals from passing through or leaking past it.

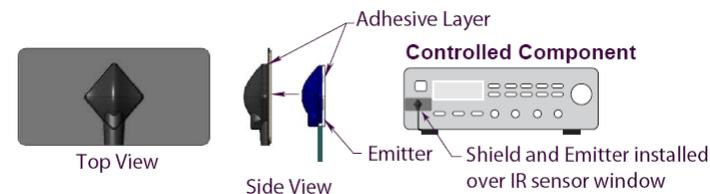

- Use the 28DES when you want the equipment to respond only to the 284D, such as in zone controlled systems.

ATTACHING THE EMITTERS TO OTHER LOCATIONS


- The high output from the curved top side of the emitter permits control from as much as 3 feet away when on the axis of the IR sensor window of the component.
- This allows placement on surfaces just below, above or in front of the controlled components for a more pleasing aesthetic appearance.
- Choose a location on a cabinet shelf, door, etc., as shown in Figs. 3b, c and d. Be sure the edge of the component does not block the IR signal (Figs. 3c and d).

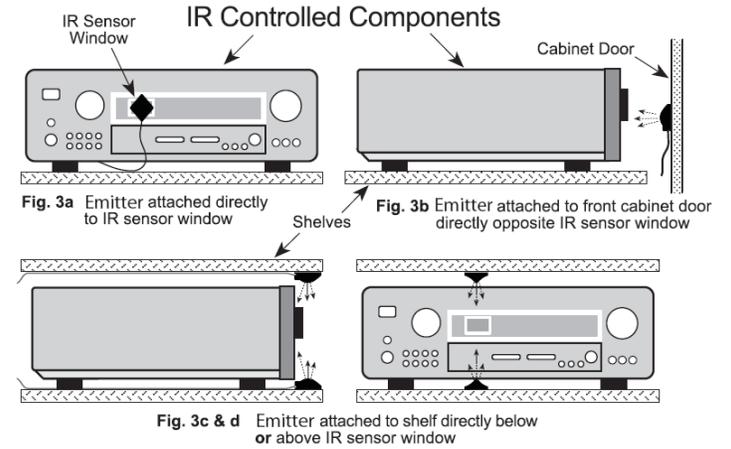

CAUTION: Cabinet door locations (Fig. 3b) will usually result in interruption of the IR control signals to the components when the door is open.

CONNECTING THE EMITTERS

- Simply insert the mono mini plug of the 284D emitter into the "EMITTERS" or "OUT" jacks on any of the Xantech Connecting Blocks or Controllers.
- CAUTION: DO NOT plug emitters into the IN/OUT or HIGH OUT jacks on the 790-00 and 791-44 Connecting Blocks.** To do so will destroy the emitters!

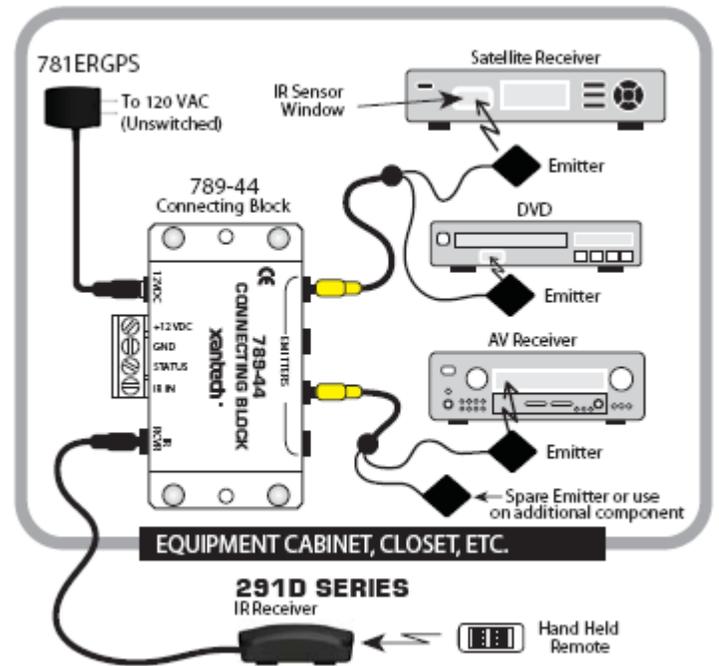

Limited Warranty

Xantech® warrants its products to be free of defects in materials or workmanship. This is a Limited Lifetime warranty from the date of purchase by the original consumer. Any products returned to Xantech and found to be defective by Xantech within the warranty period will be repaired or replaced, at Xantech's option, at no charge. Xantech will not be responsible for the actual cost of installation or removal of the product, nor for any incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights. You may have additional legal rights that vary from state to state.

Xantech Corporation
13100 Telfair Ave. 2F, Sylmar CA 91342 | Xantech.com
Installation Instructions, 284D © 2008 Xantech Corporation
Document # 08905168A

This document is copyright protected. No part of this manual may be copied or reproduced in any form without prior written consent from Xantech Corporation. Xantech Corporation shall not be liable for operational, technical, or editorial errors/omissions made in this document.